

DPR-1440-NPN-NC

Safety Light Curtain Area Sensor — Mechanical

Dimensions and Installation Instructions



Version: 1.0 | Date: August 2026 | SKU: SH30

DAPPRA Automation — Industrial Sensor Manufacturer

1. Product Dimensions


The DPR-1440-NPN-NC features a compact design with a 29 × 30 mm cross-section, making it suitable for space-constrained industrial installations.

Dimension	Value
Protection Height	520 mm
Total Height (including end caps)	606 mm
Optical Axis Pitch	40 mm
Cross Section (Width × Depth)	29 × 30 mm
Number of Beams	14
Emitter / Receiver Length	606 mm

DPR-1440-NPN-NC

Safety Light Curtain Area Sensor — Mechanical Dimension Drawing

DAPPRA
AUTOMATION

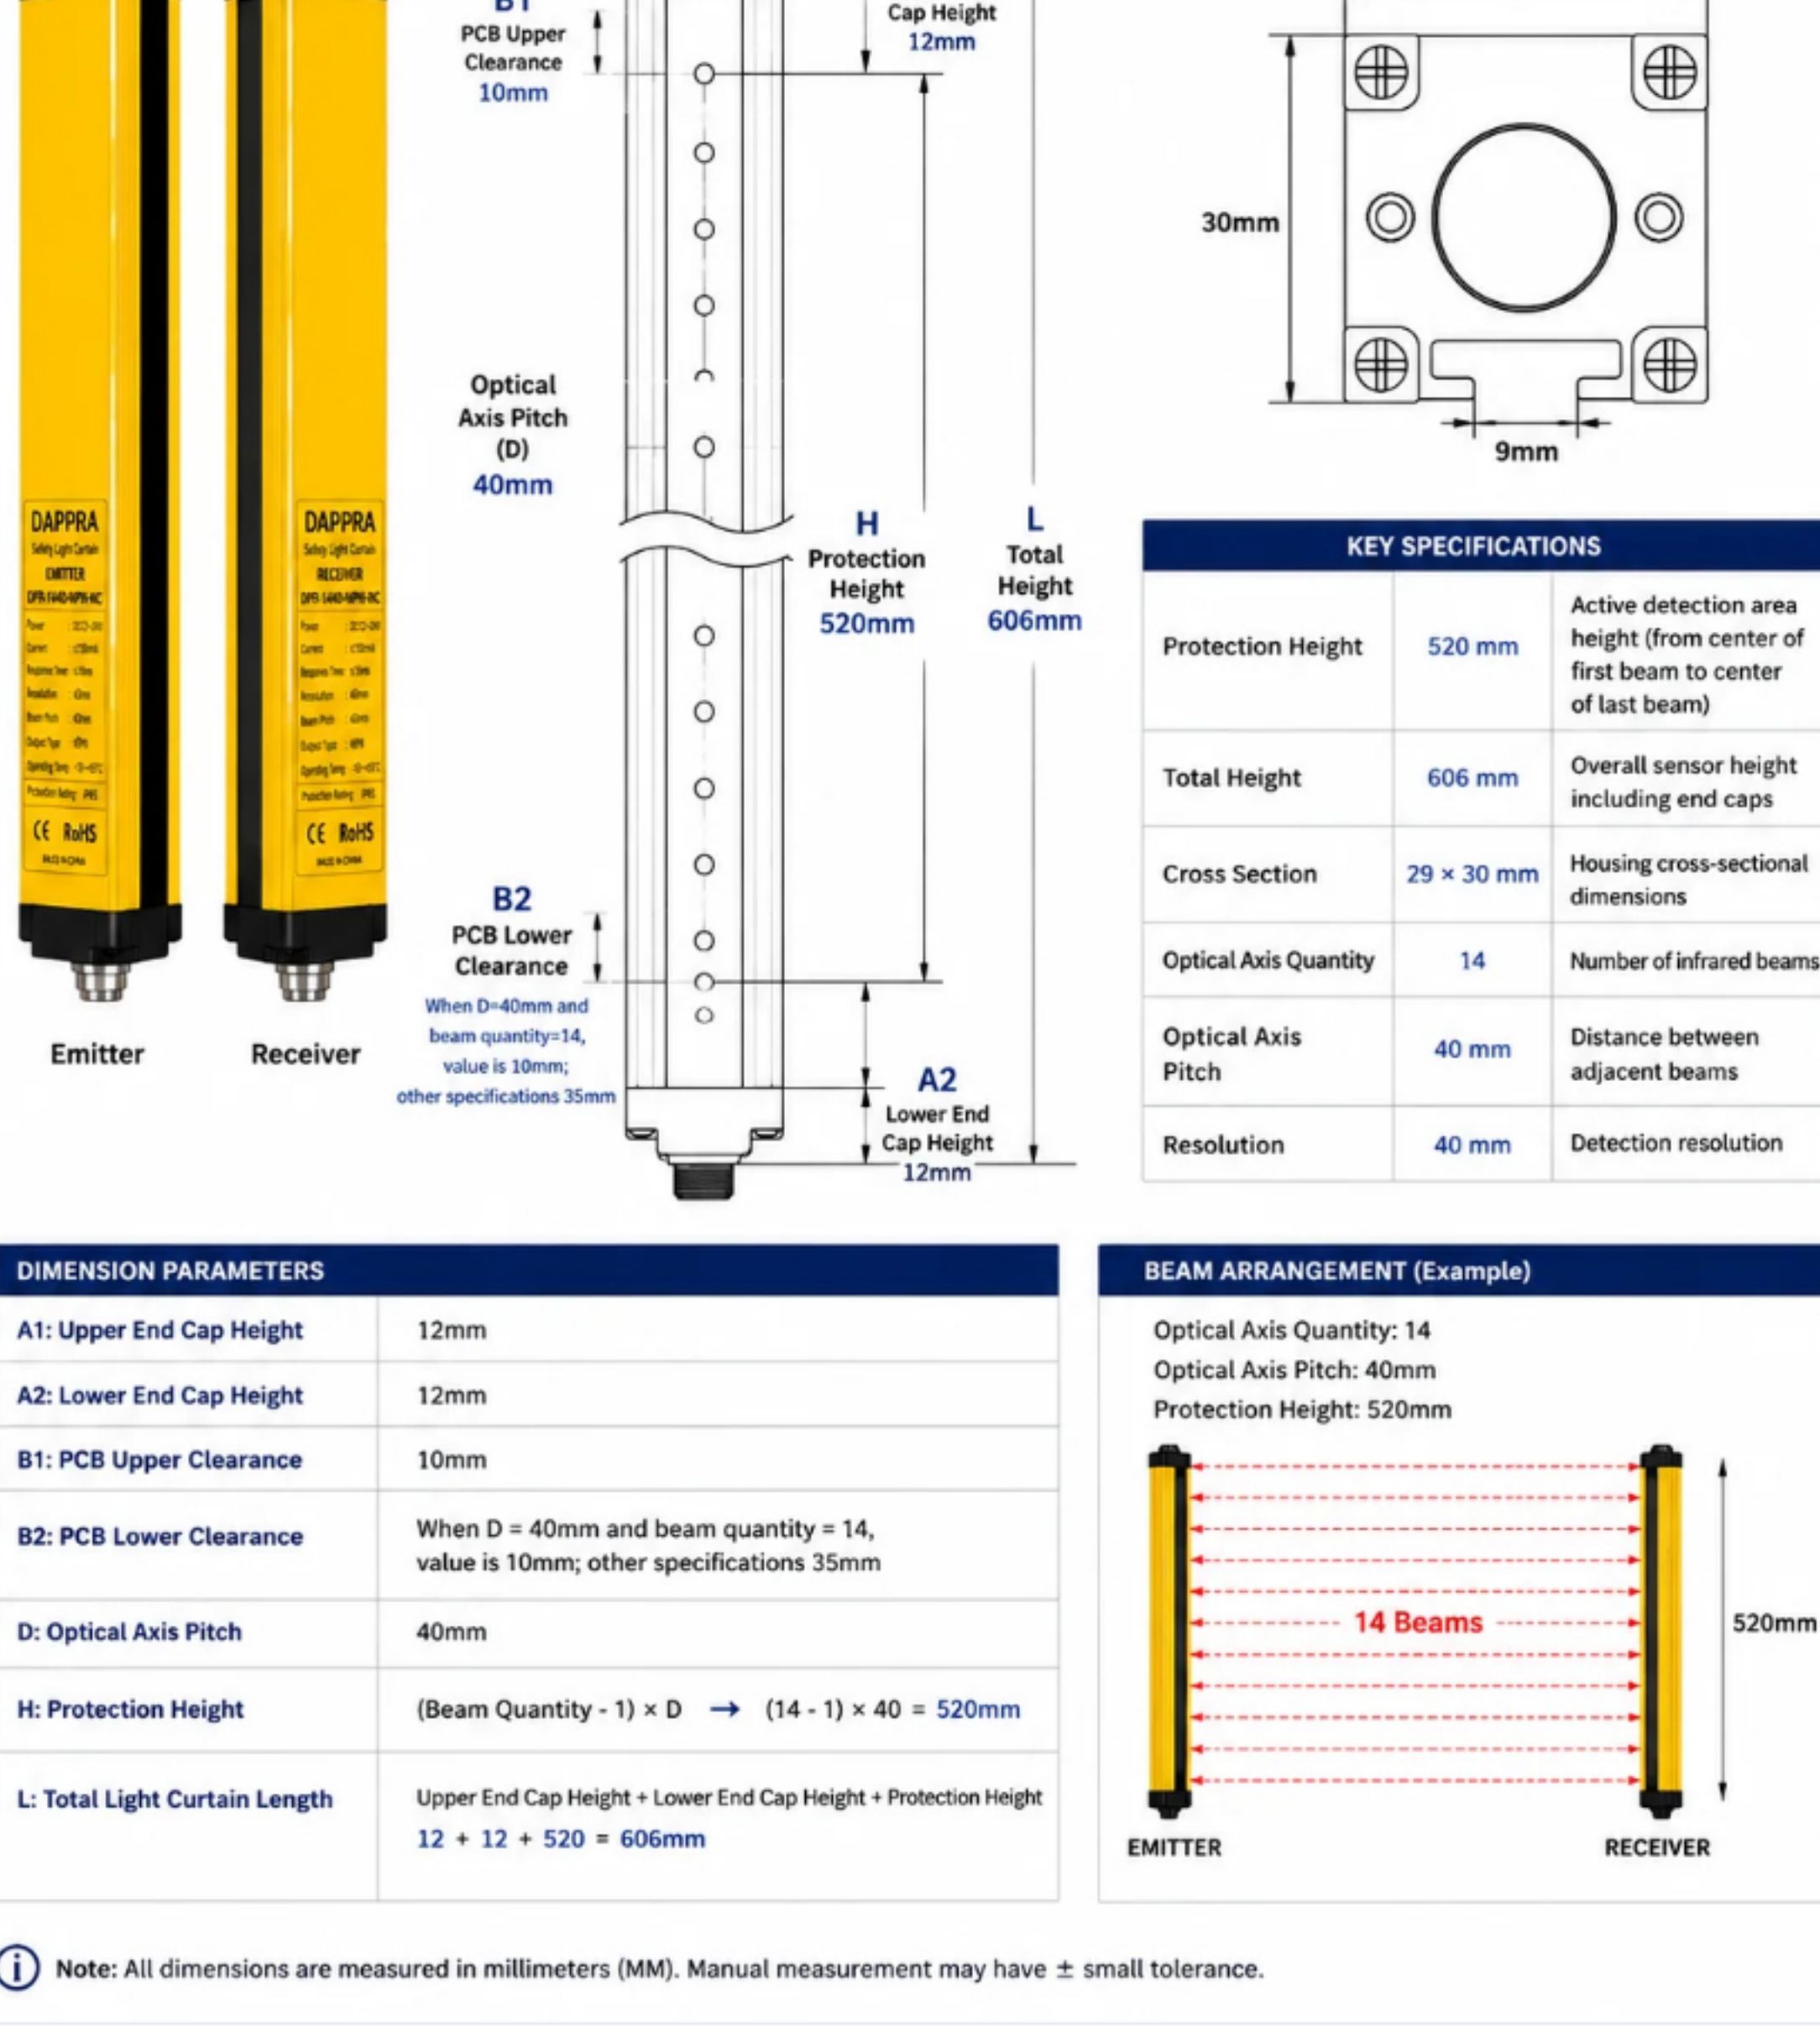

Note: All dimensions are measured in millimeters (MM). Manual measurement may have ± small tolerance.

DPR-1440-NPN-NC SH30 Mechanical Dimension Drawing

2. Protection Height Calculation

Protection Height = (Beam Quantity - 1) × Optical Axis Pitch

(14 - 1) × 40 mm = 520 mm

Total Height: 606 mm (including end caps)

3. Installation Methods

The DPR-1440-NPN-NC supports three primary installation methods to accommodate various machine structures and space constraints.

3.1 Standard Vertical Installation

The emitter and receiver are mounted vertically opposite each other, creating a detection area across the full protection height.

- **Suitable for:** CNC machines, press machines, machine entrances, safety protection areas
- **Advantages:** Simple alignment, maximum coverage area

3.2 Side Installation

Mounts the sensor on the side of the machine frame where standard vertical mounting space is restricted.

- **Suitable for:** Compact equipment, limited installation space, customized machine layouts
- **Advantages:** Space-efficient, adaptable to machine geometry


3.3 Adjustable Bracket Installation

Uses adjustable mounting brackets for flexible positioning and fine-tuning of emitter-receiver alignment.

- **Suitable for:** Customized automation equipment, retrofits, flexible manufacturing cells
- **Advantages:** Easier alignment, flexible angle adjustment

DPR-1440-NPN-NC INSTALLATION METHODS

Flexible installation options to adapt to different machine structures and protection requirements

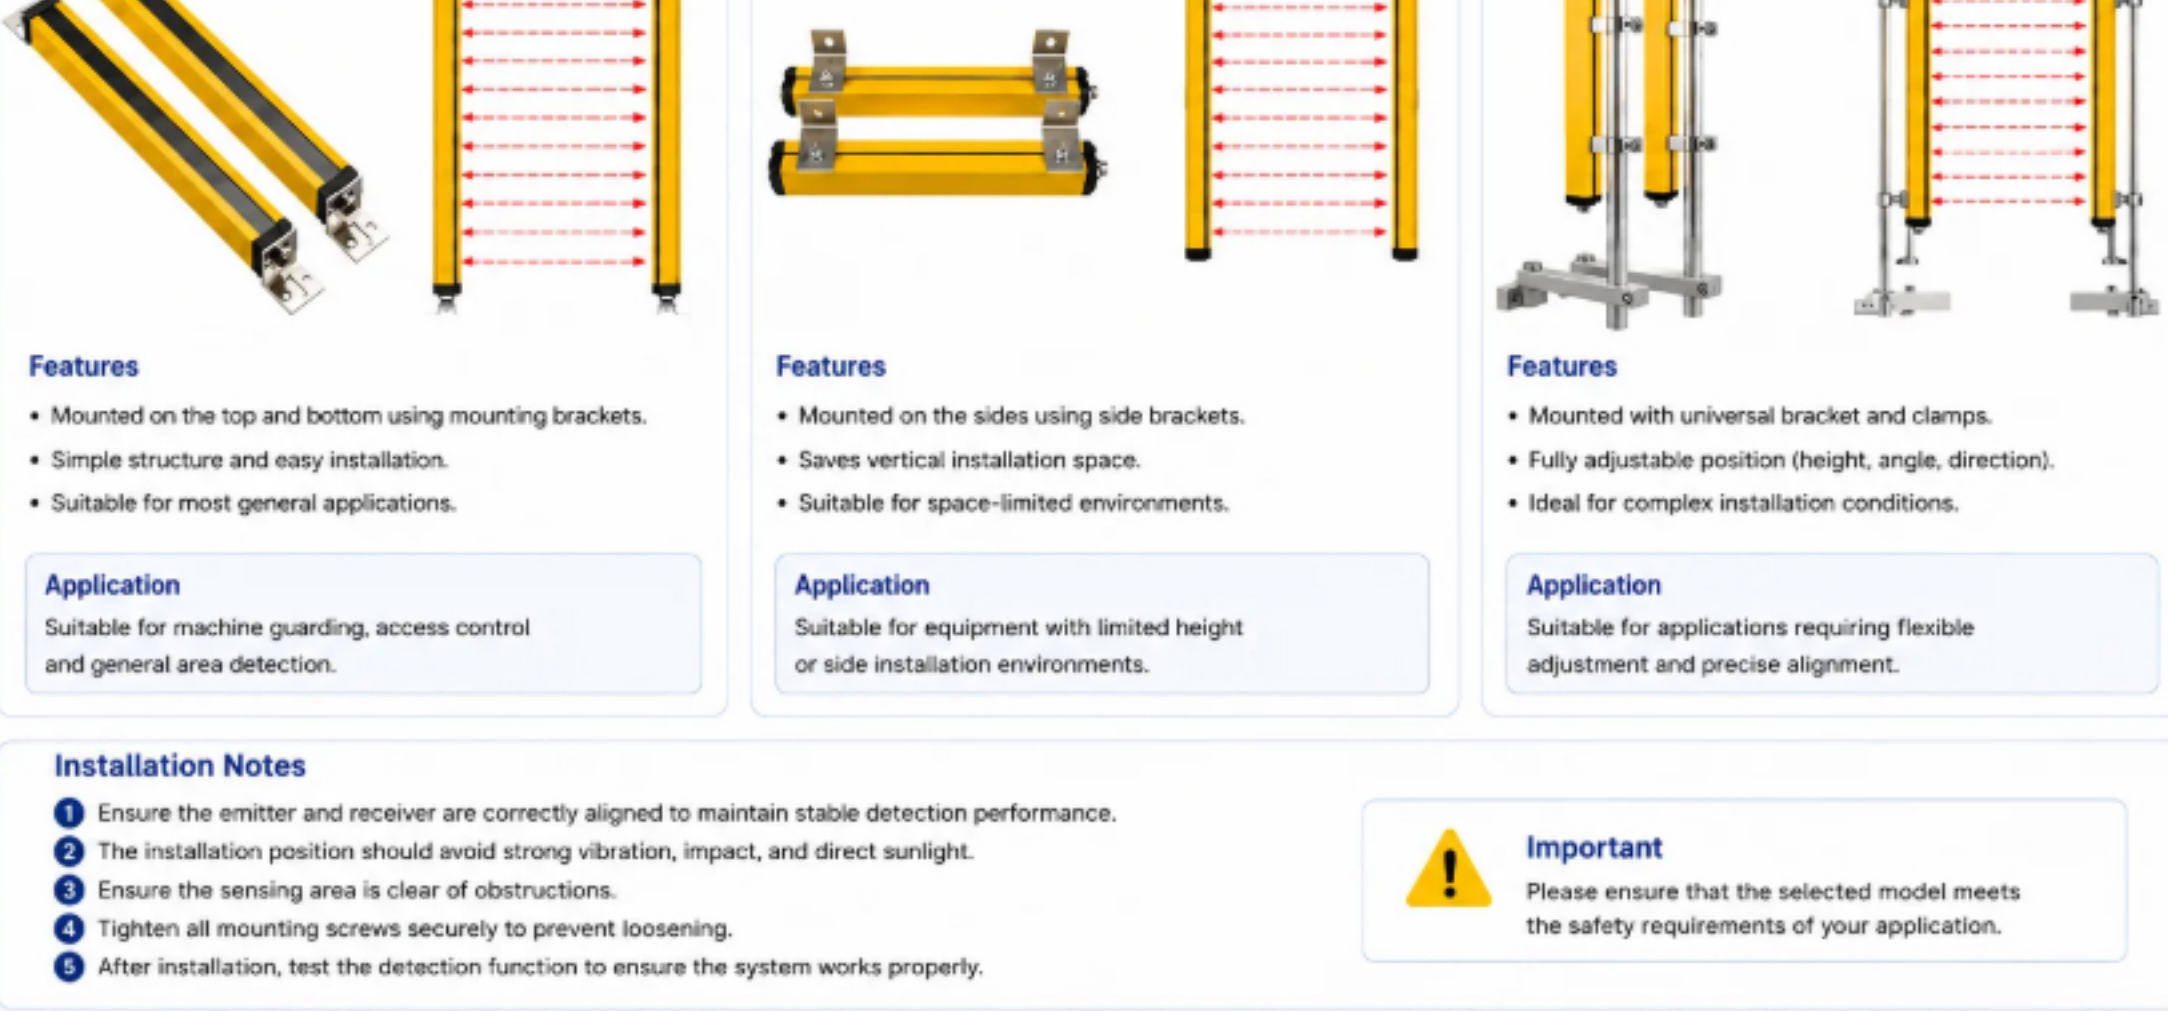

DPR-1440-NPN-NC SH30 Installation Methods

IMPORTANT: Ensure proper alignment between emitter and receiver. Use the alignment indicator LEDs to confirm correct positioning before securing the brackets.

4. Wiring Instructions

The DPR-1440-NPN-NC uses an **NPN NC output** configuration. Follow the wiring diagram below for proper connection.


Wire Color	Function	Description
Brown	Power Supply (+)	DC24V ±20%
Blue	Power Supply (-)	GND (0V)
Black	Output Signal	NPN NC output
White	Test / Sync (optional)	For function test or synchronization

Signal Logic — NPN NC

Condition	Output Signal
Normal beam transmission (no object)	0V (low level) — Output active
Beam interrupted (object detected)	High impedance — Output inactive

DPR-1440-NPN-NC WIRING DIAGRAM

NPN NC Output (Normally Closed)

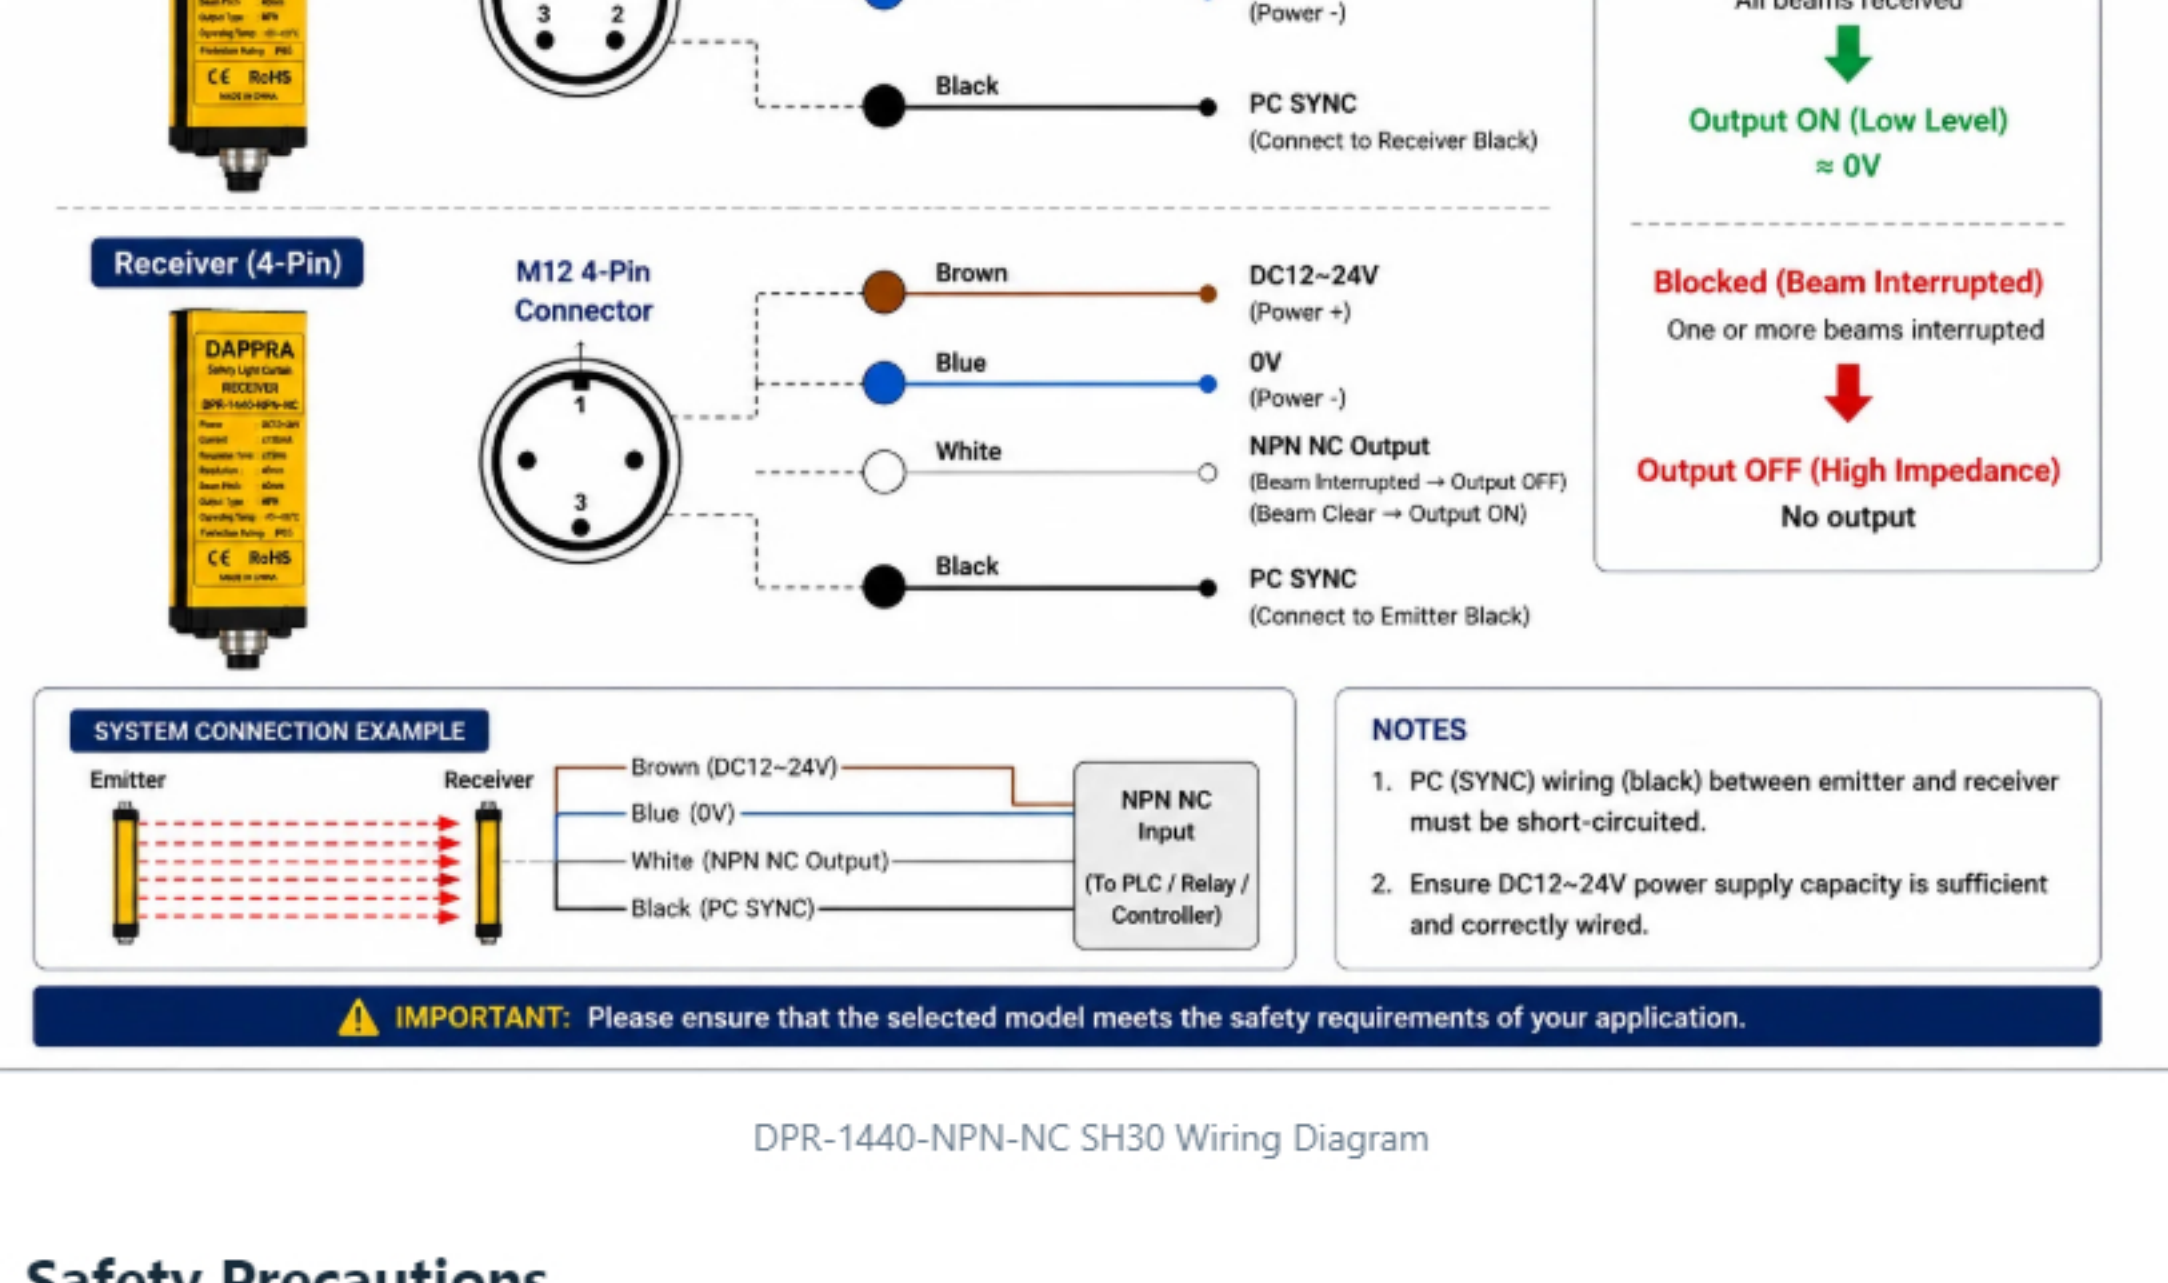

DPR-1440-NPN-NC SH30 Wiring Diagram

5. Safety Precautions

- Ensure power supply is within DC24V ±20% specification before connection.
- Do not disassemble or modify the sensor. Contact DAPPRA for service.
- Keep the optical surfaces clean for reliable detection.
- Do not operate the sensor beyond the rated environmental specifications.
- The SIL certification applies only when installed and used according to the instructions.

For technical support: www.dappra.com | info@dappra.com